

Yoga Install - Cove Heaters

Install according to the [Customer and Contractor Checklist - Installation/Operation](#)

Linked below are some documents with the [Cove heater](#) specifications:

- [Installation/Operation Manual](#)
- [Manufacturer Cut Sheet](#)
- [Ceiling-Mount Cut Sheet](#)

Here are our infrared hot yoga support guides. More information can be found on our [Support Hub](#):

- [Ecobee Wiring Diagrams](#)
- [Infrared Yoga Installation Guide](#)
- [Heating Green Infrared Yoga Operation Guide](#)

If your electrician has any questions about wiring the controls (thermostat, relays, transformer) they can reach out directly to the [Professional Technical Support Line at Jackson Systems 1-888-652-9663](#). They are available 8 AM - 6 PM EST M-F.

Relays: Each relay should have its own dedicated circuit and control a group of heaters

- The total amperage of the panels (wattage/volts= amps) should not exceed 80% of the amperage of the relays (ex: 30 amp relays should not exceed 24 amps in regards to the number of heaters)
- We recommend placing relays in an accessible area such as near the electrical panel

